AVENUE Outdoor COLLECTION

AV10001

WALL SCONCE

Thank you for your purchase.

Welcome to the Avenue Lighting Family. Please follow these instructions carefully as they contain important information about the safety, use and disposal of this product. Read and understand all instructions before proceeding with assembly and installation of this fixture.

-This fixture MUST be installed by a licensed electrician.
-All parts must be used as indicated in this install sheet.
-DO NOT substitute any parts, leave parts out, or use parts that are worn out or broken.
-This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications.
-Use ONLY the supplied LED driver to power this fixture.
-Do NOT operate fixture if any lights are not operating or are operating improperly in order to prevent further damage.

Preparation:

Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration. If any parts are missing or damaged, DO NOT attempt to assemble the product.

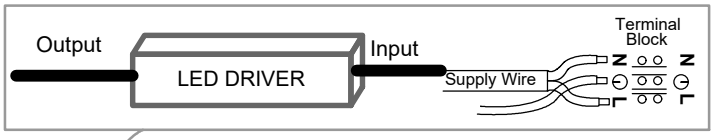

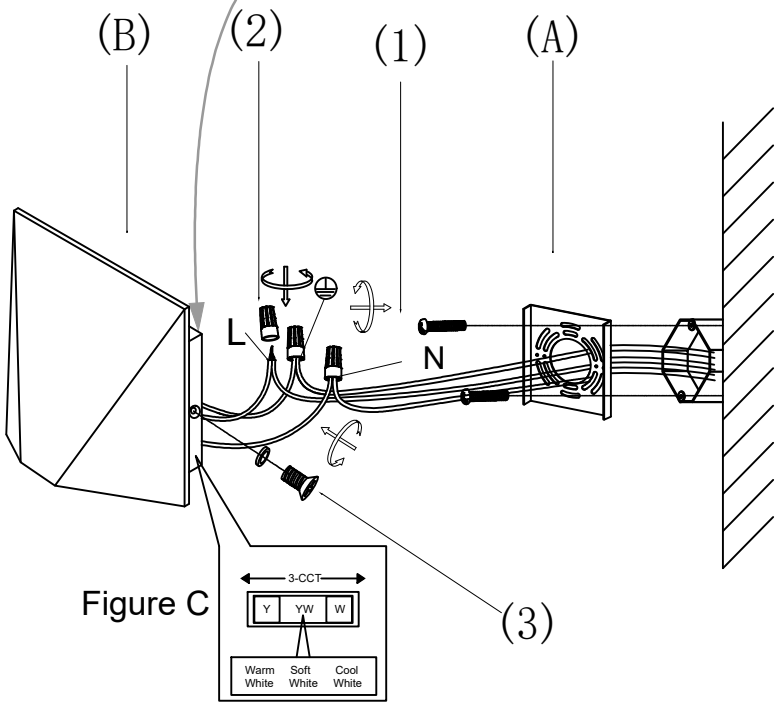

Figure C

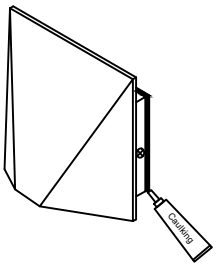

Figure D

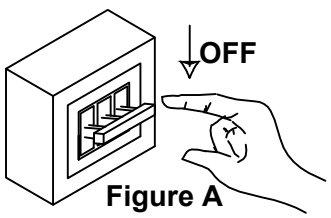

Figure A

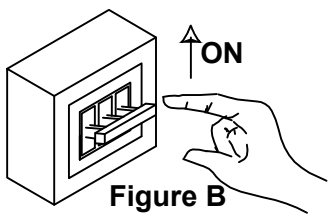

Figure B

Tools Required (not included):

~ Phillips screwdriver
~ Flathead screwdriver
~ Wire Strippers
~ Electrical Tape
~ Ladder
~ Safety Glasses

Assembly Instructions:

1. Please turn off the power before installing the lamp [see figure A]
2. Remove the mounting bracket from the top box, then place the mounting bracket on the junction box. Next tighten with the junction box screw.
3. Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts provided in hardware package.
4. Choose color temperature by using slider on the back of fixture[see figure C]
5. Secure the canopy to the mounting plate using the mounting screws.
6. Turn on the power [see figure B]
7. Caulk around backplate where fixture meets the wall leave a hole at the bottom to allow water to escape. [see figure D]

www.AvenueLighting.com *Clean with a soft damp cloth.*

3CCT Color Temperature Adjustment Instructions

Note: This product features 3CCT (3-in-1 Color Temperature) design, with optional color temperatures: 2700K / 3000K / 4000K.
Please follow the steps below to adjust the color temperature:

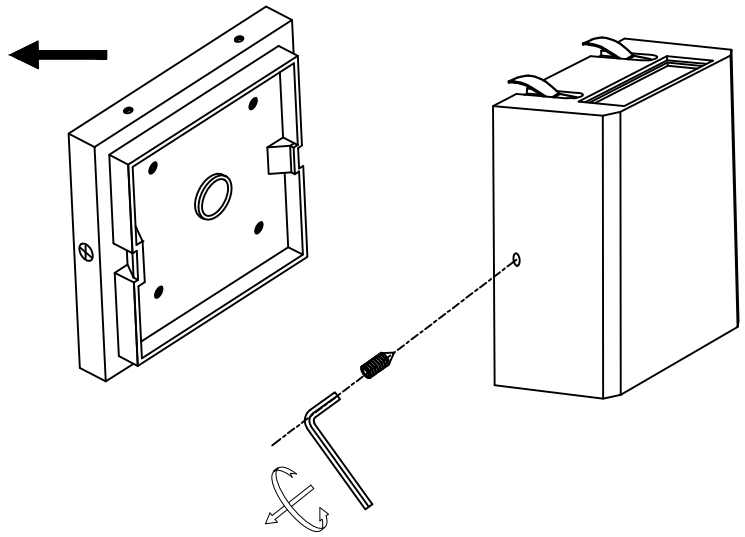

1. Use the Allen Key from the accessory pack to remove the mounting plate from the side of the fixture.

2. You will see the slide switch with 3 selectable positions, corresponding to 2700K, 3000K, and 4000K respectively.

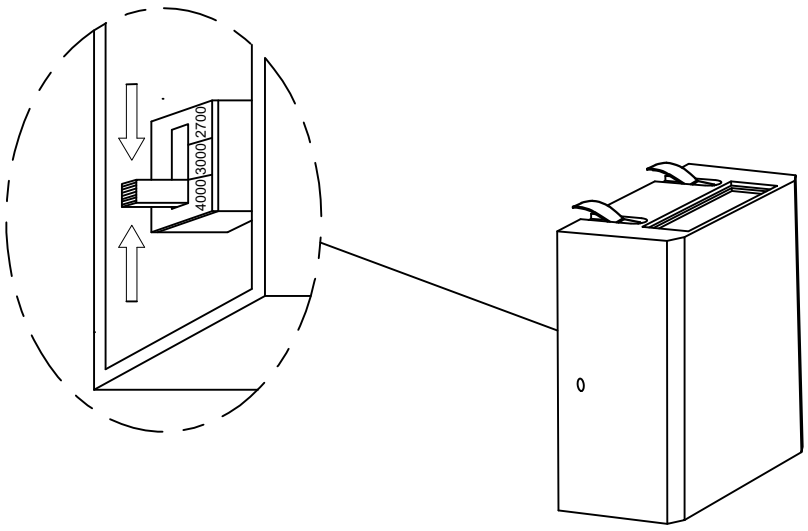

3. Slide the switch to your desired color temperature position, then re-install and secure the Mounting Plate as original.

Final Tip: The adjustment is completed once the mounting plate is locked back in place, and the fixture will work at the selected color temperature.