


Magnetic track light system


Installation Manual

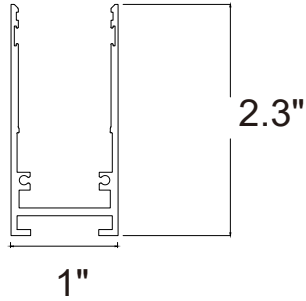


Mini Curvy Version




Curvy full-D10-s

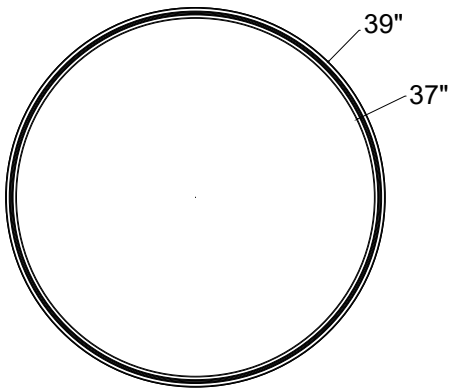


Curvy 1/2-D10-s

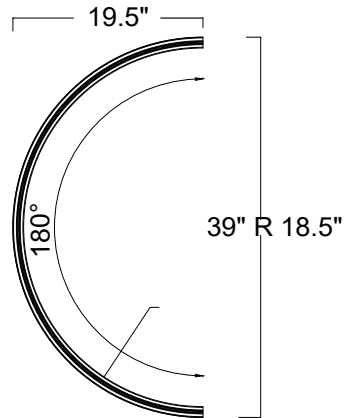

Curvy 1/4-D10-s

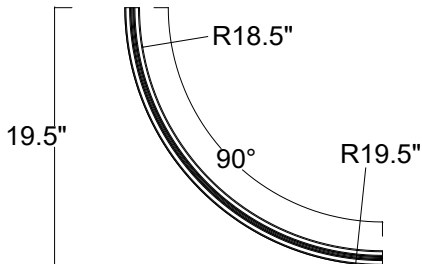

Curvy 1/8-D10-s

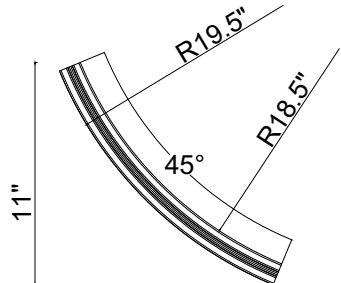

CAUTION:

- 1. BEFORE INSTALLING THE LIGHT FIXTURES, PLEASE READ THE INSTALLATION INSTRUCTIONS CAREFULLY.
- 2. DISCONNECT POWER AT CIRCUIT BREAKER BEFORE INSTALLATION OR SERVICING.
- 3. DO NOT INSTALL THE TRACK IN DAMP OR WET LOCATIONS.
- 4. THIS TRACK IS IP20, INDOOR USE ONLY.
- 5. ALL ELECTRICAL CONNECTIONS SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

CONTENTS:

Pendant mounted	1-3
Surface mounted with kits	4-5
Recessed mounted with kits	6-7
Curvy tracks connection	8

INSTALLATION INSTRUCTIONS

CAUTION:

- 1. BEFORE INSTALLING THE LIGHT FIXTURES, PLEASE READ THE INSTALLATION INSTRUCTIONS CAREFULLY.
- 2. DISCONNECT POWER AT CIRCUIT BREAKER BEFORE INSTALLATION OR SERVICING.
- 3. DO NOT INSTALL THE TRACK IN DAMP OR WET LOCATIONS.
- 4. THIS TRACK IS IP20, INDOOR USE ONLY.
- 5. ALL ELECTRICAL CONNECTIONS SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

PENDANT MOUNTED


INCLUDED HARDWARE

- | | |
|-------------------------|-----------------|
| 1 × PENDANT POWER CABLE | 1 × CROSS BAR |
| 1 × ALLEN WRENCH | 2 × LONG SCREWS |
| 1 × WIRE CLIP | 2 × WALL PLUGS |
| 2 × SMALL SCREWS | 2 × M4 SCREW |
| 3 × WIRE NUT | |


PENDANT KIT-B WHICH INCLUDES:

- | | |
|----------------------|-----------------|
| 1 × SUSPENSION CABLE | 1 × CROSS BAR |
| 1 × ALLEN WRENCH | 2 × LONG SCREWS |
| 1 × WIRE CLIP | 2 × WALL PLUGS |
| 2 × SMALL SCREWS | 2 × M4 SCREW |


01 MARK THE CENTER LINE WHERE TRACK IS TO BE INSTALLED

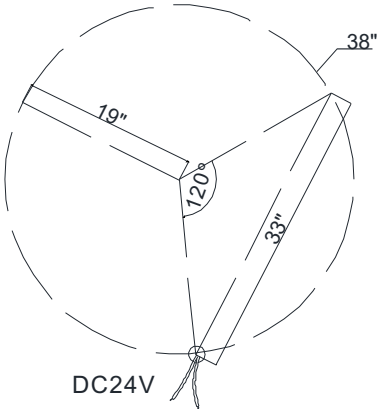


03 INSTALL CROSS BARS






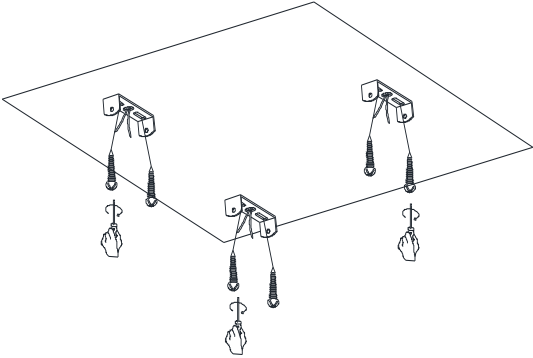


02 DRILLING FOR WALL PLUGS IF NEEDED

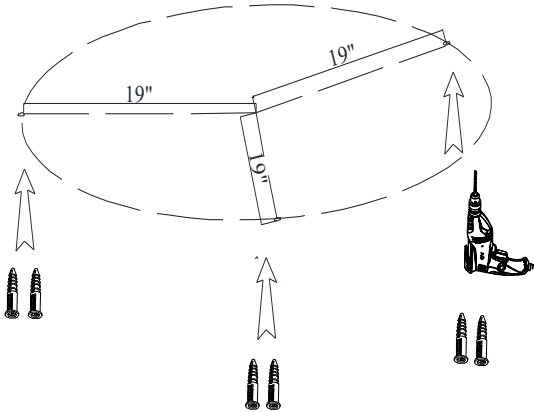


04 CONNECT THE POWER CABLE

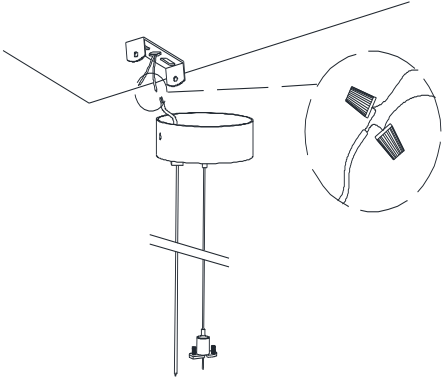


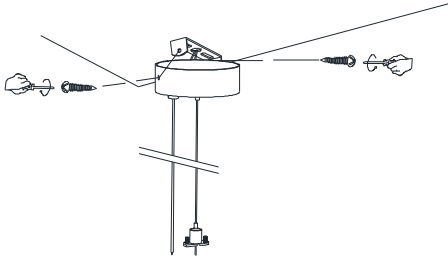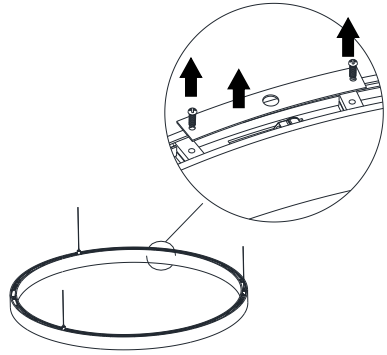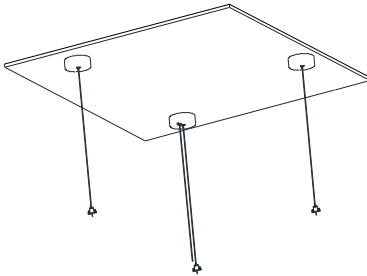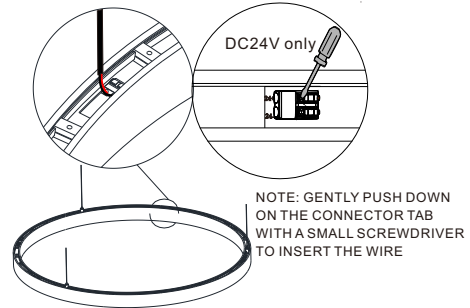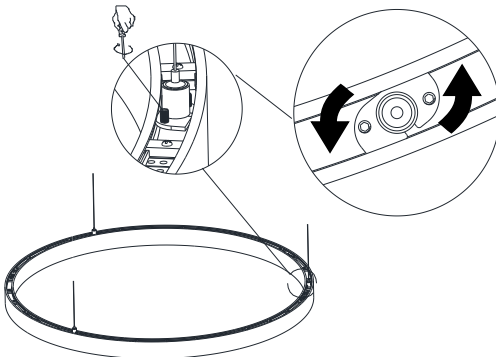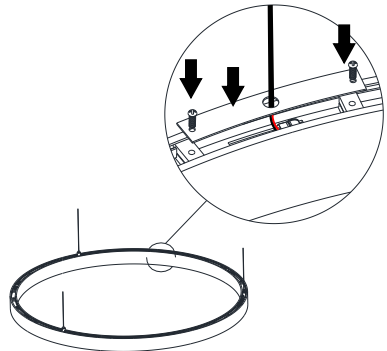05 FIX THE CANOPY TO THE CROSS BAR**08 REMOVE THE SCREWS AND COVER PLATE****06 FIXING THE REST CANOPY****09 CONNECT 24 VOLT POWER FROM THE DRIVER TO THE 24 VOLT ON THE TRACK, RED WIRE TO POSITIVE AND BLACK WIRE TO NEGATIVE. ATTACH THE WIRE RESTRAINT TO THE POWER CORD.****07 FIX THE KIT ON THE TRACK****10 LOCK SCREWS AND COVER PLATES**


- 11** ADJUST SUSPENSION CABLE TO DESIRED HEIGHT BY PUSHING DOWN ON CABLE GRIPPER AND PULLING DOWN ON CABLE. ONCE HEIGHT IS FINAL, CUT OFF EXCESS CABLE.

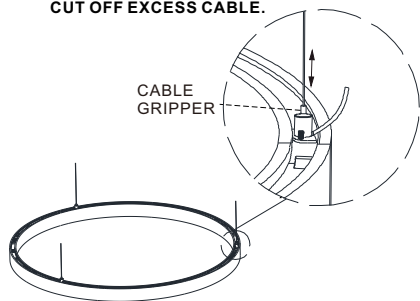


- 12** ATTACH THE WIRE CLIP

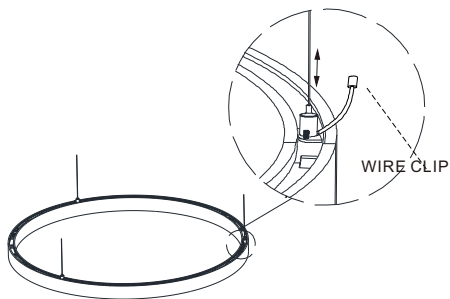


- 13** FINISH INSTALLATION OF THE TRACK

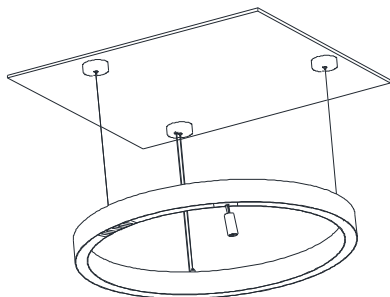


- 05** CONNECT 24 VOLT POWER FROM THE DRIVER TO THE 24 VOLT ON THE TRACK, RED WIRE TO POSITIVE AND BLACK WIRE TO NEGATIVE. ATTACH THE WIRE RESTRAINT TO THE POWER CORD.

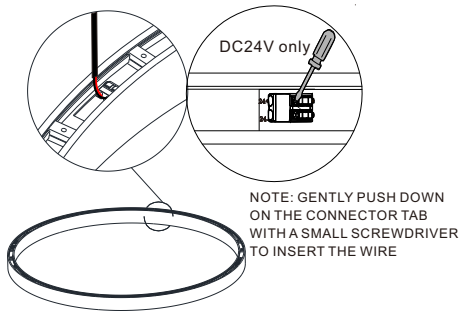


- 07** SECURE TRACK TO CEILING BY TURNING THE KITS LOCKING TRACK IN PLACE.

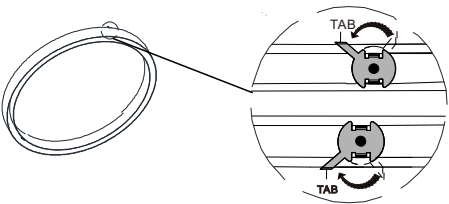

- 06** FIX COVER PLATE WITH SCREWS

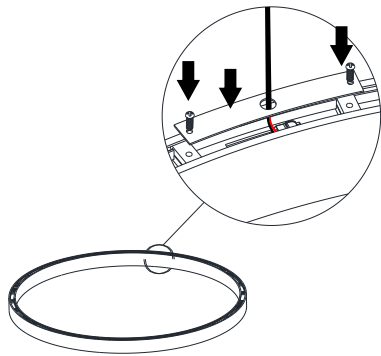

- 08** FINISH INSTALLATION OF THE TRACK






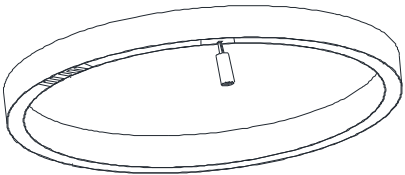


RECESSED MOUNTED WITH KITS
INSTALLATION INSTRUCTIONS**CAUTION:**


1. BEFORE INSTALLING THE LIGHT FIXTURES, PLEASE READ THE INSTALLATION INSTRUCTIONS CAREFULLY.
2. DISCONNECT POWER AT CIRCUIT BREAKER BEFORE INSTALLATION OR SERVICING.
3. DO NOT INSTALL THE TRACK IN DAMP OR WET LOCATIONS.
4. THIS TRACK IS IP20, INDOOR USE ONLY.
5. ALL ELECTRICAL CONNECTIONS SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

INCLUDED HARDWARE**RECESSED KITS**


WHICH INCLUDES: 3 × RECESSED KITS

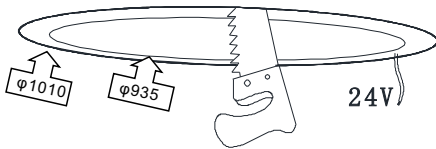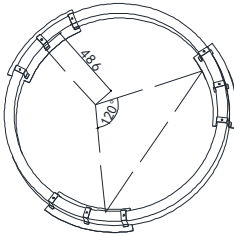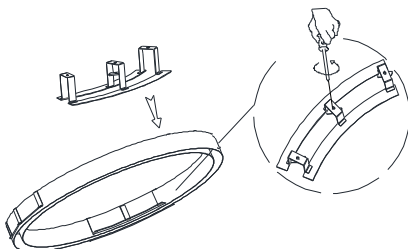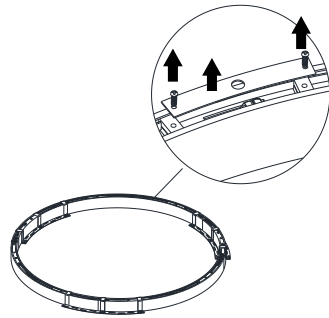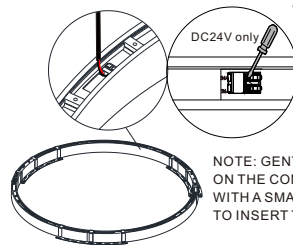**RECESSED MOUNTED WITH KITS****01 CUT THE CEILING****02 RECESSED KITS ARRANGEMENTS****03 FIX THE KITS ON THE TRACK****04 REMOVE THE SCREWS AND COVER PLATE****05 CONNECT 24 VOLT POWER FROM THE DRIVER TO THE 24 VOLT ON THE TRACK, RED WIRE TO POSITIVE AND BLACK WIRE TO NEGATIVE. ATTACH THE WIRE RESTRAINT TO THE POWER CORD.**


NOTE: GENTLY PUSH DOWN ON THE CONNECTOR TAB WITH A SMALL SCREWDRIVER TO INSERT THE WIRE

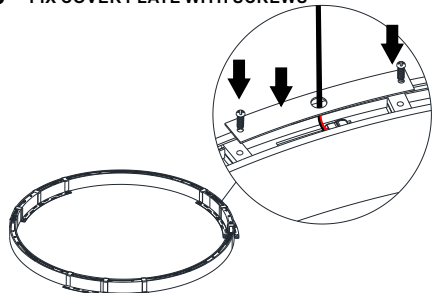06 FIX COVER PLATE WITH SCREWS


07 RECESSED MOUNT THE TRACK TO CEILING

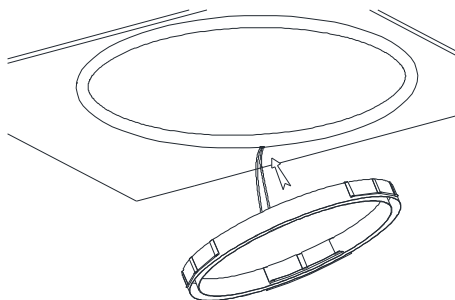


11 PLASTERING

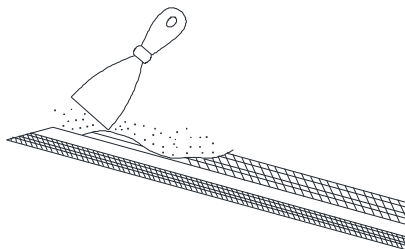


08 FIX THE KITS ON CEILING

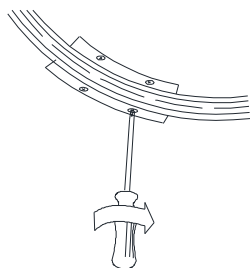

12 PAINTING

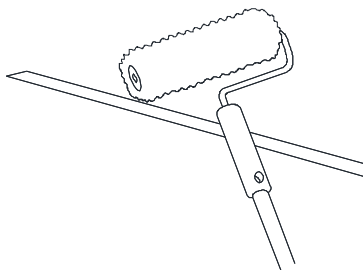

10 TAPING WITH FIBERGLASS TAPE

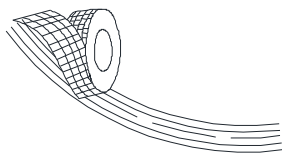

13 INSTALL THE LAMPS



NOTE: CALCULATE THE WATTAGE OF ALL ELEMENTS BEING USED TO MAKE SURE MAXIMUM WATTAGE OF REMOTE DRIVER IS NOT BEING EXCEEDED.

CURVY TRACKS CONNECTION**INSTALLATION INSTRUCTIONS****CAUTION:**

1. BEFORE INSTALLING THE LIGHT FIXTURES, PLEASE READ THE INSTALLATION INSTRUCTIONS CAREFULLY.
2. DISCONNECT POWER AT CIRCUIT BREAKER BEFORE INSTALLATION OR SERVICING.
3. DO NOT INSTALL THE TRACK IN DAMP OR WET LOCATIONS.
4. THIS TRACK IS IP20, INDOOR USE ONLY.
5. ALL ELECTRICAL CONNECTIONS SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.






CURVY TRACKS CONNECTION**INCLUDED HARDWARE**

WHICH INCLUDES: 2 × PIN2





TRACK CONNECTOR

WHICH INCLUDES: 1 × TRACK CONNECTOR

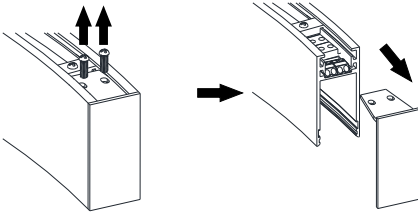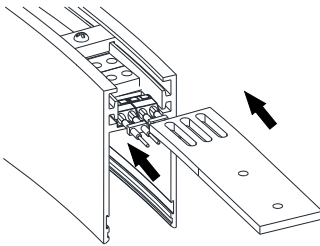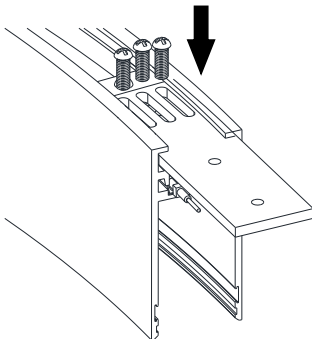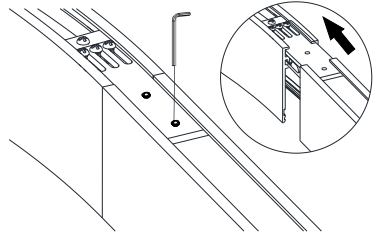**01 REMOVE END CAP FROM TRACK****02 INSERT THE PIN SET TO PIN CONNECTORS, SLIDE TRACK CONNECTOR TO THE CURVY TRACK END****03 FIX THE TRACK CONNECTOR WITH SCREWS****04 SLIDE THE STRAIGHT TRACK ONTO THE TRACK CONNECTOR WHILE CAREFULLY LINING UP THE PIN SET ON THE CURVY TRACK WITH THE PIN SET HOLES ON THE STRAIGHT TRACK****ATTENTION**

WHEN JOINING TRACKS OR ACCESSORIES UTILIZING PIN CONNECTORS, MAKE SURE PINS ARE HORIZONTAL AND LINE UP WITH PIN CONNECTOR HOLES. YOU MAY NEED TO GENTLY PUSH UP OR DOWN ON THE PINS SO THEY LINE UP CORRECTLY. FAILING TO DO THIS MAY RESULT IN PINS MISSING THE PIN CONNECTOR HOLES AND LOSS OF THE 24 VOLT CONNECTION.

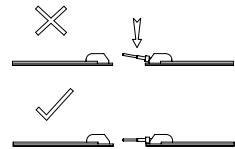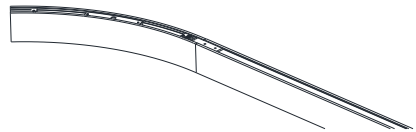**05 FINISHED CONNECTION**

ARCHITECTURAL LIGHTING

less is more
more than linear
human centric lighting
linear style
intelligent control
extremely functional
variety of mounting
invisible lamp
visual comfort
magnetic fixing
natural CCT alternative
full spectrum